

ZEGKEG handling – before/after use

Before use



1. Remove the cap from the adapter.



2. Disinfect the adapter and the coupler.



3a. Connect it to the dispensing device.
3b. Supply the pressure source (gas/air).

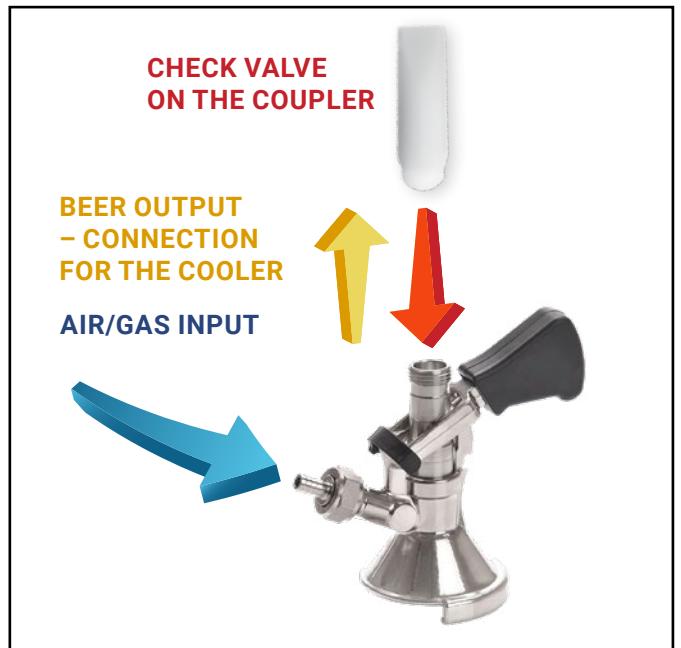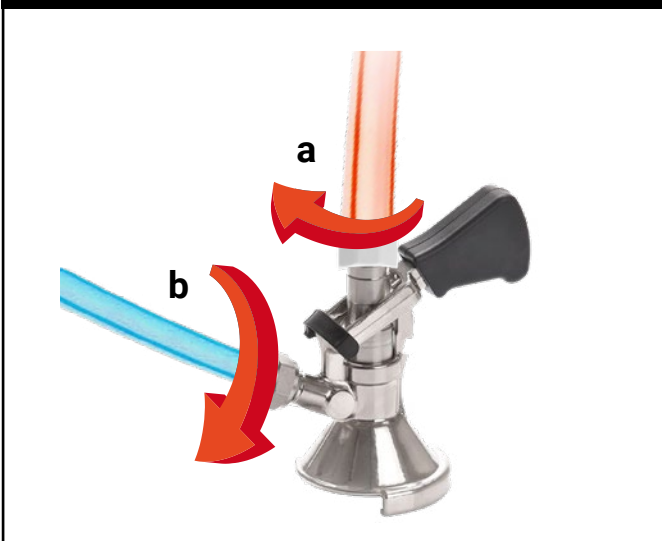

S-type adapter connection

1. Push down.

2. Rotate clockwise.

3. Press the lever down.




1. Insert from the side.

2. Press the lever down.




After use


1. Release the pressure by pulling₁ and turning₂ the PRV valve.

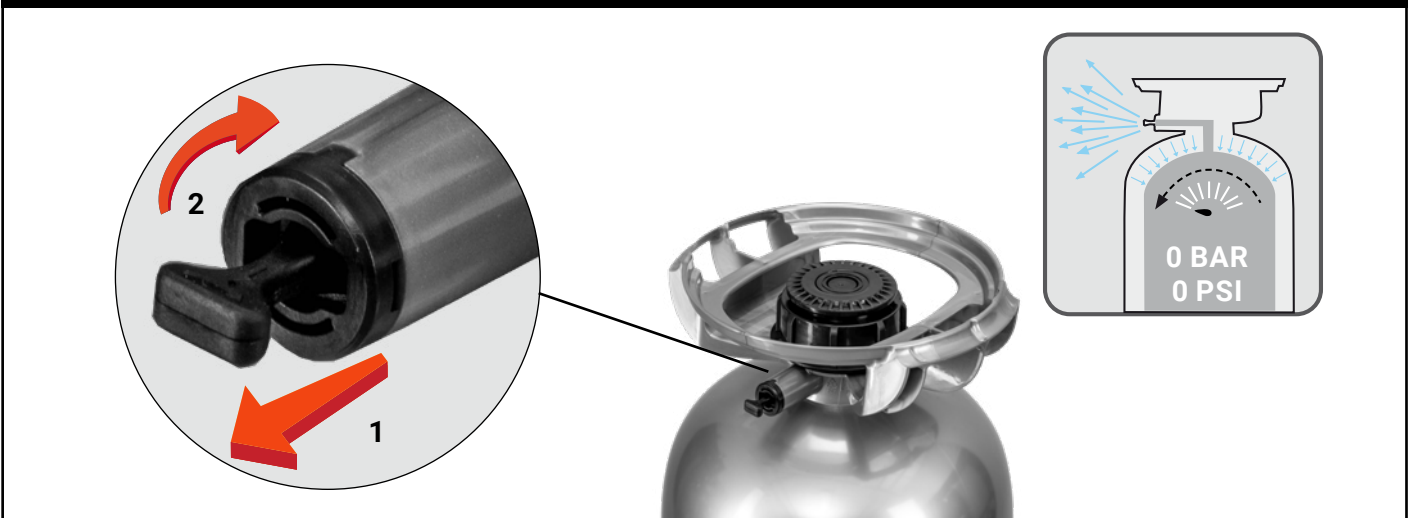


2. Minimize the volume.

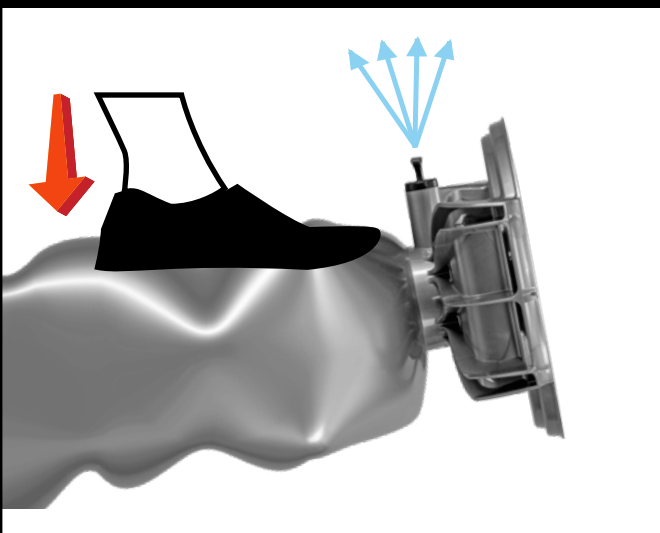


3. Follow the instructions in the ZEG KEG recycling manual.

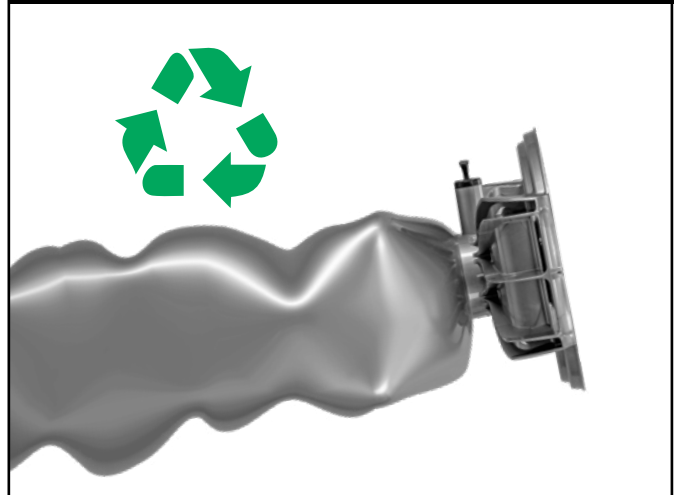


Maintain the temperature between 6–8 °C.
Cool for at least 10 hours.

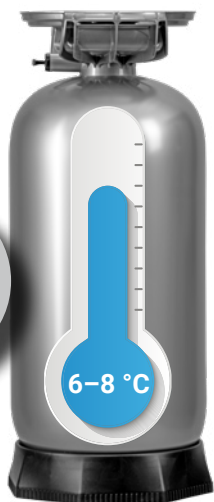

The ideal pressure for beer dispensing is between 1.8–2.8 bar.

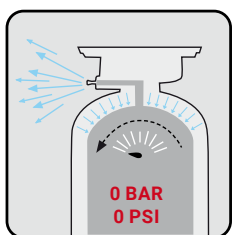

Depressurize immediately after use.

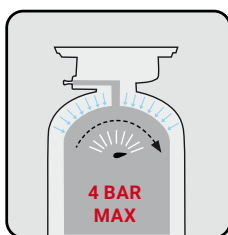

Dispense pressure max. 4.1 bar (60 psi).



Attention, an empty keg is filled with N₂ (nitrogen) to a pressure of 1,5–2 bar.



Warning

Pressure in keg, handle with care.
For professional use only.

Do not reuse.
Store up to 40°C!



Keep away from cleaning agents as alkaline, caustic hydroxides or soapy cleaning products with pH > 9.



Do not pierce or cut with sharp objects.



Do not roll.



Keep away from open fire.



Keep away from direct sunlight or other heat sources.



When handling do not use brute force.

